




144-pin SO-DIMM Installation Guide

This Product is backed by a Limited Lifetime Warranty.
For complete warranty information visit
www.edgetechcorp.com/register

EDGE™ manufactures 144-pin SO-DIMMs for use in notebook computers. Each SO-DIMM will contain a number of chips which will vary from 2 to up to 16. Along the edge of the DIMM, there will be gold contacts on the front and back. These are often referred to as the “pins” of the module. Along the connector edge, you will notice a notch near the left of center. This alignment notch will help you orient the SO-DIMM correctly into the socket.

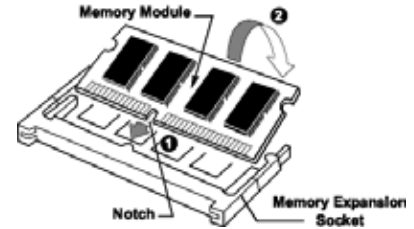

Handling Memory DIMMs and Internal Computer Components

Memory DIMMs, like most electrical components inside computers, are susceptible to damage by static electricity. You should NEVER handle memory or computer parts if you have any static electricity buildup. Before working with any sensitive electronics, be sure to touch the metal casing of the computer first to ground yourself. If you have an antistatic grounding strap, it's a very good idea to use it while working with your computer.

In addition to eliminating static discharge, DIMMs need to be handled carefully. Avoid touching the metal contacts to help prevent future corrosion due to skin oils. Do not drop, bend, or stress your DIMMs. Do not expose them to temperature extremes or high humidity. Allowing your DIMM to become subject to such conditions may damage your DIMMs and will void your warranty.

Installing Memory SO-DIMMs

Installing your memory SO-DIMM is a fairly easy process; however, before attempting installation, make sure you have all of these items to ensure your installation will go smoothly: 1) your new memory upgrade 2) your notebook owner's manual or technical manual 3) the tools that are necessary to open your case and access memory slots 4) a work area in a low-static environment (i.e.-A laminated table surface in a non-carpeted room), and an antistatic grounding strap, if available.

Memory SO-DIMM Installation*:

- 1) With the notebook turned off and unplugged, remove the rechargeable battery. (Refer to your owner's manual)
- 2) Follow the manufacturer's instructions to locate and gain access to the memory socket or sockets.
- 3) Your memory module and expansion socket are keyed. A small plastic bridge in the socket must align with the notch in the module. The keyed bridge and notch insures that the module can be plugged into the socket one way only.
- 4) Insert your memory module into the socket at a 30-45 degree angle. Make sure the notch and the module are properly aligned.
- 5) Once the module is properly aligned in the socket, rotate the module downwards until the clips at each end of the expansion socket click into place. To remove a module from an expansion socket, place your thumbs on each of the clips located on both sides of the socket, and press apart to the left and right away from the module. The SO-DIMM module should spring upward. Remove it at the same angle it was inserted.
- 6) After installing your module or modules, close the computer; reinstall any cables that may have been disconnected during the installation process; replace the rechargeable battery and plug in the AC power cord.
- 7) Turn on your computer and follow the instructions in your Owner's Manual to configure the computer to recognize the new memory.

*These steps apply to the most popular installations. If you have difficulty during installation(s) or these steps do not apply to your particular installation, please contact the computer vendor's technical support line or EDGE's Technical Support Department for assistance.

IMPORTANT

PLEASE CONTACT A QUALIFIED TECHNICIAN FOR ASSISTANCE IN INSTALLING THIS PRODUCT IF YOU ARE NOT FAMILIAR WITH DOING SO. ANY INSTRUCTIONS INCLUDED WITH THE PRODUCT ARE FOR CONVENIENCE ONLY AND ARE NOT INTENDED TO BE ALL-INCLUSIVE.



327 East 14th Street / Ada OK 74820 (800) 332-6581 / (580) 332-6581 / www.edgetechcorp.com

EDGE™ is a trademark of EDGE Tech Corp. Trademarked words or logos used herein are property of their respective owners.