



DiskGO!™ USB Watch Drive-Casual Style Quick Installation Guide



This Product is backed by a One Year Limited Warranty.
For complete warranty information visit www.edgetechcorp.com/register
For a detailed instruction manual go to www.edgetechcorp.com/support/manuals

Note: This manual supercedes the instructions on the accompanying CD.

Thank you for purchasing the DiskGO! USB Watch Drive. Built with only high-quality components, this product is made to deliver you the best in file transfer convenience and portability. Enjoy the flexibility of having your data easily accessible from your everyday watch!

SETTING THE TIME

Pull out the crown. Turn the crown in either direction to set hour and minute. Push the crown to the normal position to start.

BASIC FUNCTIONS FOR USE ON A PC

When you plug the device into the USB port of your PC, you will see a "Removable Disk" icon in the file manager window. (If you are using Windows 98, you must install the driver before you install the application software.)

FOR USE ON A MAC

If using the DiskGO! Watch on a Macintosh, using OS 9.0 or higher, when you plug the watch into the USB port, you will see the disk icon on the Desktop.

For MAC OS 8.6, you must download the necessary USB mass storage driver from Apple's website before using the DiskGO! USB Watch Drive.

If using MAC OS 10.2 or higher and you get a persistent Initialization Error, you may need to download the MAC OS 10.2x or 10.3x patch. This patch is available for download from our website at <http://www.edgetechcorp.com/support/diskgowatch.asp>.

In Linux OS, you can use the following instruction to "mount" the device:

- 1) Plug the device into the USB port of your computer.
- 2) Execute `cd /etc/sysconfig (cat /etc/sysconfig/hwconf | more)`
- 3) Check the device information in `hwconf`; write down the mount point.
- 4) Make a directory in `/mnt` (ex: `mkdir /mnt/usbHD`).
- 5) Execute `mount /dev/sda1 /mnt/usbHD` (if mount point was `.dev/sda`)

Read/Write Capability

You can read, write, copy, and delete files and data as you do files and data on a hard drive or floppy disk. The USB Watch Drive allows for easy drag and drop of your files.

Unplugging the Device

IMPORTANT! DANGER! HOLD THE CABLE FIRMLY WHEN UNPLUGGING IT.
TUGGING ON THE WATCH TO UNPLUG THE CABLE MAY PERMANENTLY DAMAGE THE CABLE.
SUCH DAMAGE IS NOT COVERED BY WARRANTY.

When using Windows ME, 2000, or XP, you must stop the device using the "safe removal" icon in the system tray.

- 1) Before you remove the DiskGO! Watch, please make sure the LED is not flashing. If the LED is flashing, there is still communication occurring between your computer and the DiskGO! Watch. Do not remove the DiskGO! Watch; it may cause damage to the data, and possibly the DiskGO! Watch itself.
- 2) Double-click the "Safe removal" icon to bring up the "Unplug or Eject Hardware" window.
- 3) Select the device you wish to remove (USB Mass Storage Device). Then click "Stop".
- 4) Wait until you see the message indicating it is safe to unplug the device from the USB port. It is now safe to remove your DiskGO! watch from your computer.

If you are using a Macintosh, you can drag the removable disk icon into the trash bin. This will perform the "Eject" function which will allow you to safely remove the DiskGO!.

If you are using Linux, please use the "umount" command to remove the device.

IMPORTANT

PLEASE CONTACT A QUALIFIED TECHNICIAN FOR ASSISTANCE IN INSTALLING OR USING THIS PRODUCT IF YOU ARE NOT FAMILIAR WITH DOING SO. ANY INSTRUCTIONS INCLUDED WITH THE PRODUCT ARE FOR CONVENIENCE ONLY AND ARE NOT INTENDED TO BE ALL-INCLUSIVE.

