

**NEED
HELP?****TECH SUPPORT**
www.edgetechcorp.com/support**DiskGO!™ USB Watch
Drive-Steel Dress Style
Quick Installation Guide****This Product is backed by a One Year Limited Warranty.
For complete warranty information visit
www.edgetechcorp.com/register****SETTING THE DATE & TIME**

- 1) To set the date, pull out the crown half way (first click).
- 2) Turn the crown in either direction to set the date.
- 3) To set the time, pull out the crown all the way (second click).
- 4) Turn the crown in either direction to set hour and minute.
- 5) Push the crown in to the normal position to start.

CONNECTING THE WATCH

Your DiskGO! USB Watch Drive-Steel Dress Style is shipped with two retractable, external USB cables for your convenience. By gently pulling on both ends at the same time, the cord will lengthen and lock in position. A slight tug again on both ends will allow the cord to retract. Simply plug the small end of the connector into the port located on the left hand side of the watch under the protective cover, and plug the other end to your computer's USB port.

BASIC FUNCTIONS

Read/Write Capability :You can read, write, copy, and delete files and data just as with files and data on a hard drive or floppy disk. The DiskGO! USB Watch Drive-Steel Dress Style allows for easy drag and drop of your files.

For use on a Microsoft Windows based PC

When you plug the device into the USB port of your PC, you will see a "Removable Disk" icon in the file manager window. (Note: If you are using Windows 98, you must install a driver. You can download the driver from <http://www.edgetechcorp.com/support>. Please choose your product and download the driver software).

To install the driver, follow the instructions below. This will install the Win98SE and DiskGO! USB Watch Drive-Steel Dress Style Drivers:

- 1) Unzip the driver files and extract to a floppy or save them in a new folder (Note: Remember where you saved the files).
- 2) Plug in the device. When the "Found New Hardware Wizard" appears on the screen, click "Next".
- 3) Select the "Search for the best driver for your device" (Recommended) option and click "Next".
- 4) Select the "Specify a location" option and browse to the folder where you saved the driver files.
- 5) Click "Next". Click "Next" again. Then Click "Finish".
- 8) At this time you may have to restart your computer. Do so if prompted.

For use on a MAC

1) Using MacOS 9.0 or higher-Plug the watch into the USB port of your computer and you will see a new disk icon appear on the Desktop. Your watch is now ready for use.

Note: If you wish to move files between Mac and PC, you must format the watch using the MS DOS file system. If you intend to use the watch with MacOS only, format the watch using the Macintosh formats.

2) MacOS 8.6-You will need to download the necessary USB Mass Storage driver from Apple's website **before** connecting the DiskGO! USB Watch Drive-Steel Dress Style.

For use on Linux

- 1) Plug the device into the USB port of your computer.
- 2) Execute `cd /etc/sysconfig (cat /etc/sysconfig/hwconf | more)`
- 3) Check the device information in `hwconf`; write down the mount point.
- 4) Create a directory in `/mnt` (ex: `mkdir /mnt/usbHD`).
- 5) Execute `mount /dev/sda1 /mnt/usbHD` (if mount point was `. dev/sda`)

Unplugging the Device – IMPORTANT

Before you unplug the watch, please make sure the LED is not flashing. If the LED is flashing, data is still being transferred to/from the watch. Do not remove the device at this time; it may cause damage to the data, and possibly the watch itself. Unplug the cable from the computer first. When it is unplugged, then remove it from the watch. DO NOT REMOVE BY TUGGING ON WATCH; HOLD CABLE TO REMOVE.

When using Windows ME, 2000, or XP, you must stop the device using the "Safely Remove Hardware" icon in the system tray.

- 1) Double-click the "Safely Remove Hardware" icon to bring up the "Unplug or Eject Hardware" window.
- 2) Select the device you wish to remove (USB Mass Storage Device). Then click "Stop"
- 3) Wait until you see the message indicating it is safe to unplug the device from the USB port. It is now safe to remove your watch from your computer.

If you are using a Macintosh, you must "Eject" the device before unplugging. To do this, drag the removable disk icon into the trash bin. This will perform the "Eject" function, which will allow you to safely remove the DiskGO! USB Watch Drive-Steel Dress Style.

If you are using Linux, please use the "umount" command to remove the device.

IMPORTANT

PLEASE CONTACT A QUALIFIED TECHNICIAN FOR ASSISTANCE IN INSTALLING OR USING THIS PRODUCT IF YOU ARE NOT FAMILIAR WITH DOING SO. ANY INSTRUCTIONS INCLUDED WITH THE PRODUCT ARE FOR CONVENIENCE ONLY AND ARE NOT INTENDED TO BE ALL-INCLUSIVE.

327 East 14th Street / Ada OK 74820 (800) 332-6581 / (580) 332-6581 /
www.edgetechcorp.com

EDGE™ and DiskGO!™ are trademarks of EDGE Tech Corp. Trademarked words or logos used herein are property of their respective owners.

**NEED
HELP?****TECH SUPPORT**
www.edgetechcorp.com/support**DiskGO!™ USB Watch
Drive-Steel Dress Style
Quick Installation Guide****This Product is backed by a One Year Limited Warranty.
For complete warranty information visit
www.edgetechcorp.com/register****SETTING THE DATE & TIME**

- 1) To set the date, pull out the crown half way (first click).
- 2) Turn the crown in either direction to set the date.
- 3) To set the time, pull out the crown all the way (second click).
- 4) Turn the crown in either direction to set hour and minute.
- 5) Push the crown in to the normal position to start.

CONNECTING THE WATCH

Your DiskGO! USB Watch Drive-Steel Dress Style is shipped with two retractable, external USB cables for your convenience. By gently pulling on both ends at the same time, the cord will lengthen and lock in position. A slight tug again on both ends will allow the cord to retract. Simply plug the small end of the connector into the port located on the left hand side of the watch under the protective cover, and plug the other end to your computer's USB port.

BASIC FUNCTIONS

Read/Write Capability :You can read, write, copy, and delete files and data just as with files and data on a hard drive or floppy disk. The DiskGO! USB Watch Drive-Steel Dress Style allows for easy drag and drop of your files.

For use on a Microsoft Windows based PC

When you plug the device into the USB port of your PC, you will see a "Removable Disk" icon in the file manager window. (Note: If you are using Windows 98, you must install a driver. You can download the driver from <http://www.edgetechcorp.com/support>. Please choose your product and download the driver software).

To install the driver, follow the instructions below. This will install the Win98SE and DiskGO! USB Watch Drive-Steel Dress Style Drivers:

- 1) Unzip the driver files and extract to a floppy or save them in a new folder (Note: Remember where you saved the files).
- 2) Plug in the device. When the "Found New Hardware Wizard" appears on the screen, click "Next".
- 3) Select the "Search for the best driver for your device" (Recommended) option and click "Next".
- 4) Select the "Specify a location" option and browse to the folder where you saved the driver files.
- 5) Click "Next". Click "Next" again. Then Click "Finish".
- 8) At this time you may have to restart your computer. Do so if prompted.

For use on a MAC

1) Using MacOS 9.0 or higher-Plug the watch into the USB port of your computer and you will see a new disk icon appear on the Desktop. Your watch is now ready for use.

Note: If you wish to move files between Mac and PC, you must format the watch using the MS DOS file system. If you intend to use the watch with MacOS only, format the watch using the Macintosh formats.

2) MacOS 8.6-You will need to download the necessary USB Mass Storage driver from Apple's website **before** connecting the DiskGO! USB Watch Drive-Steel Dress Style.

For use on Linux

- 1) Plug the device into the USB port of your computer.
- 2) Execute `cd /etc/sysconfig (cat /etc/sysconfig/hwconf | more)`
- 3) Check the device information in `hwconf`; write down the mount point.
- 4) Create a directory in `/mnt` (ex: `mkdir /mnt/usbHD`).
- 5) Execute `mount /dev/sda1 /mnt/usbHD` (if mount point was `. dev/sda`)

Unplugging the Device – IMPORTANT

Before you unplug the watch, please make sure the LED is not flashing. If the LED is flashing, data is still being transferred to/from the watch. Do not remove the device at this time; it may cause damage to the data, and possibly the watch itself. Unplug the cable from the computer first. When it is unplugged, then remove it from the watch. DO NOT REMOVE BY TUGGING ON WATCH; HOLD CABLE TO REMOVE.

When using Windows ME, 2000, or XP, you must stop the device using the "Safely Remove Hardware" icon in the system tray.

- 1) Double-click the "Safely Remove Hardware" icon to bring up the "Unplug or Eject Hardware" window.
- 2) Select the device you wish to remove (USB Mass Storage Device). Then click "Stop"
- 3) Wait until you see the message indicating it is safe to unplug the device from the USB port. It is now safe to remove your watch from your computer.

If you are using a Macintosh, you must "Eject" the device before unplugging. To do this, drag the removable disk icon into the trash bin. This will perform the "Eject" function, which will allow you to safely remove the DiskGO! USB Watch Drive-Steel Dress Style.

If you are using Linux, please use the "umount" command to remove the device.

IMPORTANT

PLEASE CONTACT A QUALIFIED TECHNICIAN FOR ASSISTANCE IN INSTALLING OR USING THIS PRODUCT IF YOU ARE NOT FAMILIAR WITH DOING SO. ANY INSTRUCTIONS INCLUDED WITH THE PRODUCT ARE FOR CONVENIENCE ONLY AND ARE NOT INTENDED TO BE ALL-INCLUSIVE.

327 East 14th Street / Ada OK 74820 (800) 332-6581 / (580) 332-6581 /
www.edgetechcorp.com

EDGE™ and DiskGO!™ are trademarks of EDGE Tech Corp. Trademarked words or logos used herein are property of their respective owners.