



DiskGO!™ MP3 Player + USB Flash Drive Operations Manual



**This Product is backed by a One Year Limited Warranty.
For complete warranty information visit
www.edgetechcorp.com/register**

Thank you for purchasing the DiskGO!™ MP3 Player plus USB Flash Drive! This device stores MP3 files for playback or transport as well as any data files that you may need while on-the-GO! The integrated USB connector allows you to write/read files from most computers without installing any drivers. We are certain you will enjoy the convenience of using this device to listen to your favorite MP3s as well as storing all of your important data.

System Requirements

- USB 1.1 or 2.0 interface port running one of the following operating systems:
 - o Windows 98SE/ME/CE/2000/XP, Linux 2.4 or higher, MacOS 9.0 – 10.2 (Note, this device is not able to read/write files using MacOS 10.3.0, 10.3.1, or 10.3.2. Please update your OS to 10.3.3 or higher. Users who have updated to 10.3.5 cannot format the player with MS DOS or the play function will be disabled. Please use an earlier version i.e. OS 9.2.2 to format the player. Please see notes in the Mac OS formatting section)
- 64MB of system RAM (128MB or more recommended)

Safety and Handling

- Do not connect the device to your USB port while the power is on. Ensure that the USB switch is set to USB before connecting the device.
- Do not remove the device from the USB port while it is reading or writing data.
- Do not overcharge the rechargeable battery. Doing so may reduce the playback time/life of the battery.
- Do not attempt to disassemble or alter any part of the device.
- Do not allow the product to come into contact with water or other liquids. In the event the interior of the device were to come into contact with water or other liquids, immediately unplug it from the computer and/or switch the player off.
- Do not connect or disconnect the device if your hands are wet. There is a risk of electrical shock.
- Do not place the product near a heat source or expose it to direct flame or heat.
- Avoid exposing the device to extreme direct sunlight.
- Never place the device near equipment generating strong electromagnetic fields (i.e. unshielded speakers, high voltage power lines, etc.) Exposure to these fields may cause malfunctions and/or data loss and corruption.

Package Contents

- DiskGO!™ MP3 Player plus USB Flash Drive
- Lanyard with stereo ear buds
- USB Extension Cable
- Operation manual and Warranty Information

Lanyard

The lanyard is intended to go around your neck for easy handling of the device during MP3 playback and file transport. The chrome button on the base of the lanyard is used for quick disconnect/reconnect. To thread the lanyard end into the lanyard handle on the device, disconnect the lanyard end at the base, thread and reconnect.

Rechargeable Battery

When the device is connected to a computer's USB port, the battery automatically charges. A 2-hour charge will provide up to 8 hours of MP3 playback. Do not overcharge the battery.

Note – The internal flash memory does not require battery power to retain its data. If your battery becomes fully discharged, your MP3 and data files will remain safe.

LED Indicator

In USB Disk mode:

- No LED – Indicates the device is turned off.
- Solid Red/Yellow/Green – Indicates that the device is connected to the USB port and is charging. The Green LED will turn off once the device is fully charged.
- Blinking Red/Yellow – Indicates that the device is currently reading or writing data.
DO NOT disconnect the device while the device is reading or writing files. Data loss or damage to the product may occur.

In MP3 playback mode:

- Solid Red – Indicates that the device is in Pause or Stop mode.
- Blinking Red – Indicates MP3 playback.

In REC (MIC recording) mode:

- Solid Yellow – Indicates that the device is in Pause or Stop mode.
- Blinking Red/Yellow – Indicates that the device is recording.
- Blink Yellow – Indicates recording (WAV) playback.

Device Switches

MP3/REC Disk Switch

Switches the device between MP3 playback mode and WAV recording/playback mode.

USB/Battery Switch

“USB” switches the device off when not connected to a computer. “Battery” switches the device to MP3 playback mode or WAV recording/playback mode.

Important – Be sure that the USB/Battery switch is set to USB before connecting the device to your USB port. Once connected, do not change the switch position.

MP3 Playback Operation

Play/Pause

Press and release to play/pause playback.

Track +/- Buttons

Press and release quickly to go to the next or previous track.

Volume +/- Buttons

Press and hold to adjust the volume up or down.

MP3 File Playback

- To use the MP3 playback functionality, you must copy MP3 files to the device.
- The device will playback files in the order in which they were copied to the device, with the first song copied being the first song played.
- The device will only playback files in the root (lowest) directory, not files placed in folders. Any non-MP3 files will be skipped automatically during MP3 playback mode.

USB Flash Drive Instructions

Using your Device as a USB Flash Drive

To load copy, delete or edit files on the the DiskGO!™ MP3 Player + USB Flash Drive, make sure that the USB Disk switch is set to the USB setting. Do not connect the device while it is on (in “battery” mode).

Connect the device to an available USB port on your computer. You may plug it directly into the port, or use the USB extension cable. If your USB ports are on the back of your computer, the extension cable is a convenient way to extend port availability to the front of the computer or to your desktop. You may leave the extension cable connected to your port even if the device is not connected.

After a few seconds, your computer will recognize your DiskGO!™ MP3 Player + USB Flash Drive as if it were an additional hard drive or floppy drive. You can copy, create and delete files on your device. Windows users can access the USB Flash Drive by browsing through “My Computer”. It will appear as a Removable Disk with a drive letter assigned, such as “Removable Disk (E:)”. It may take 5-10 seconds for your device to appear as a drive in “My Computer”.

Note - If you are using the DiskGO!™ MP3 Player + USB Flash Drive in a Novell Network environment, consult with your systems administrator to see if you have any mapped network drives. Mapped network drives can override the built-in drive lettering feature of Windows machines and can prevent your device from being properly recognized by your system.

Macintosh users can access the DiskGO!™ MP3 Player + USB Flash Drive by double-clicking the icon that appears on the desktop (usually called “No_Name”).

Software Installation (Windows 98 & 98SE Only)

Drivers are only required if using Windows 98 & 98SE. Please install driver prior to connecting the DiskGO!™ MP3 Player + USB Flash Drive for the first time.

- 1) Download the self-extracting driver file from EDGE Memory's website: <http://www.edgememory.com/support/downloads>.
- 2) Once the file has finished downloading, double-click it and to install the drivers.
- 3) After installation is complete, restart your computer. Plug your DiskGO! into your USB drive.

Format using the built-in format capability

- 1) Switch the device to Battery.

- 2) Press and hold the + and – buttons together. Formatting will begin when the solid red and yellow LEDs appear together.
- 3) When the LEDs return to normal (solid red in MP3 mode, solid yellow in REC) formatting is complete.

Format Using the Windows Format Function

- 1) Ensure the USB Disk switch is set to USB.
- 2) Connect your DiskGO!™ MP3 Player + USB Flash Drive to the computer using an available USB port, then open "My Computer".
- 3) Right-click on the Removable Disk icon for the drive letter corresponding to your device and select "Format".
- 4) Select the file system to use. If you anticipate using your DiskGO!™ MP3 Player + USB Flash Drive on both PCs and Macs, use the FAT (not FAT32) file system.
- 5) If you do not wish to delete the data, or need to back up the data to another device (like your hard drive), select "Cancel"; otherwise select "OK" to proceed. The progress bar indicator displays the status of the format process. When the format is complete, you will see the following message: "Format Complete!".
- 6) Click "OK" to return to Windows.

Format Using MacOS

- 1) Ensure the USB Disk switch is set to USB.
- 2) Connect your DiskGO!™ MP3 Player + USB Flash Drive to your computer's USB port.
- 3) Once the device appears on your desktop (usually titled "No_Name"), open your computer's main hard drive – the one with your active system folder.
- 4) Open the Applications folder, then open the Utilities folder.
- 5) Double-click on the "Disk Utilities" icon to launch the program.
- 6) In the left pane, single-click to select the device named "XXXMB Removable Disk".
- 7) Click on the "Erase" tab. Select the appropriate option for your system.
 - a. If you are using your DiskGO!™ MP3 Player + USB Flash Drive on both Macintosh and PC computers, select "MS-DOS".
 - b. Enter a label for your DiskGO! here, if necessary.
- 8) Once you have selected the options you wish to use, click the "Erase" button. Once the Disk Utility is complete, you can close the Disk Utility and begin using your USB Flash Drive.
(Note: Mac users using 10.3.5 need to use the built in formatting capability of the player. Those instructions are provided in the "Format using the built-in format capability" section. Formatting with this version will disable the play function)

Removing the DiskGO! Safely

Please follow the directions below to safely remove your device.

- Windows 98SE: Unplug ONLY when the device is in standby mode. The LED Indicator blinks while reading and writing data.
- Windows ME/2000/XP: Use the "Unplug or Eject Hardware" icon in the system tray to safely stop the DiskGO! device.
- MacOS: Drag the "Removable Disk" icon to the Trash Bin and wait for indication that you can safely remove the device.
- Linux: You can safely remove the DiskGO!™ MP3 Player + USB Flash Drive after you use the "Unmount" command.

REC (MIC recording & playback) Mode:

The DiskGO!™ MP3 Player + USB Flash Drive device contains a built-in microphone near the headphone jack. The device uses the microphone to save voice recordings to the internal disk as WAV files. These recordings can be played back through the device itself, or copied to your computer for playback.

MIC Recording

- 1) Switch the device to Battery
- 2) Switch the MP3/REC switch to REC. A solid yellow LED will appear.
- 3) Press and hold Play/Pause to begin recording. Recording begins when the LED blinks red and yellow.
- 4) Press and release Play/Pause to stop recording. The LED will return to solid yellow.

WAV playback

- 1) Switch the device to Battery
- 2) Switch the MP3/REC switch to REC. A solid yellow LED will appear.
- 3) Press and release Play/Pause to begin playback. The LED will blink yellow during playback.

IMPORTANT

PLEASE CONTACT A QUALIFIED TECHNICIAN FOR ASSISTANCE IN INSTALLING THIS PRODUCT IF YOU ARE NOT FAMILIAR WITH DOING SO. ANY INSTRUCTIONS INCLUDED WITH THE PRODUCT ARE FOR CONVENIENCE ONLY AND ARE NOT INTENDED TO BE ALL-INCLUSIVE.



327 East 14th Street / Ada OK 74820 (800) 332-6581 / (580) 332-6581 / www.edgetechcorp.com

EDGE™ is a trademark of EDGE Tech Corp. Trademarked words or logos used herein are property of their respective owners.