



EDGE™ All-in-1

Digital Camera Card Reader with xD Card™ & SDHC™ Slots

Quick Install Guide



This Product is backed by a Limited Lifetime Warranty.

For complete warranty information visit www.edgetechcorp.com/register

Minimum System Requirements

Available USB 2.0 port running one of the following operating systems: Windows 2000+, MacOS X 9.x or higher.

Hardware Installation

Installation on a Windows based system:

Note: Do not connect the reader before turning the machine on!

EDGE All-in-1 Readers use 'Mass Storage Compliant' technology. This means that users running Windows are not required to install any device drivers to operate the reader. Follow the installation steps listed:

1. Connect the Reader's USB plug to an available USB port on the computer.
2. The Operating System should then automatically install all needed drivers without further prompting.
3. The All-in-1 Reader should now show up in "My Computer".
4. Insert any accepted digital media card (SDHC™, xD Card™, SD Memory Card™, mini SD™, Compact Flash®, MMC Card™, Smart Media™, Memory Stick™, Memory Stick Pro™, Memory Stick Duo™, IBM Microdrive™ and more!) Once inserted, files can be transferred to and from the card like any other attached storage device.

Note: Prior to removing the digital media card from the reader, the card must be disconnected. Failure to do so may cause data corruption and render the card unusable.

To disconnect the card, proceed with either of the following steps:

A. Double-click the "My Computer" icon on the desktop. Right-click on the appropriate removable disk icon and select the "Eject" option. Wait for the disconnect confirmation prior to removing the card.

OR

B. Left-click on the PC card with the green arrow in the system tray. On the pop-up menu, highlight the appropriate card to remove, and then select "Stop USB Mass Storage Device." Wait for the disconnect confirmation prior to removing the card.

Installation on Macintosh systems

Note: Do not connect the reader before turning the machine on!

1. Connect the Reader's USB plug to an available USB port on the computer.
2. The Operating System should then automatically install all needed drivers without further prompting.
3. For each card inserted, the computer will show a new drive icon on the desktop.
4. The digital media card may now be used as a portable storage device, accessible through standard file access methods.

Note: Before you remove the digital media card from the reader, the card must be disconnected. Failure to do so may cause data corruption and render the card unusable.

To disconnect the card, proceed with either of the following steps:

- A. Click and drag the new disk icon(s) to the trash.
- B. Use the "Control" button and click "Eject".

IMPORTANT

PLEASE CONTACT A QUALIFIED TECHNICIAN FOR ASSISTANCE IN INSTALLING OR USING THIS PRODUCT IF YOU ARE NOT FAMILIAR WITH DOING SO. ANY INSTRUCTIONS INCLUDED WITH THE PRODUCT ARE FOR CONVENIENCE ONLY AND ARE NOT INTENDED TO BE ALL-INCLUSIVE.

