



DiskGO™ USB Watch Drive User Manual



This Product is backed by a One Year Limited Warranty.
 For complete warranty information visit www.edgetechcorp.com/register

INTRODUCTION

Thank you for purchasing the DiskGO™ USB Watch Drive. The following installation manual is designed to provide you with the information necessary to set up and operate this product. Before beginning, please ensure that the following items are included within the packaging:

- DiskGO™ USB Watch Drive
- USB extension cable

IMPORTANT INFORMATION

Minimum System Requirements:

Available USB 2.0 port running one of the following operating systems:

- Windows 2000+
- Mac OSx9+

INSTALLATION AND USE

Setting the Time

1. Pull out the crown.
2. Turn the crown in either direction to set the hour and minute.
3. Push the crown to the normal position to start.

Accessing the USB Watch Drive

FOR USE ON A PC

When you plug the device into the USB port of your PC, you will see a "Removable Disk" icon appear in "My Computer."

FOR USE ON A MAC

When you plug the device into the USB port of your Mac, you will see the disk icon on the Desktop.

In Linux OS, you can use the following instruction to "mount" the device:

1. Plug the device into the USB port of your computer.
2. Execute `cd /etc/sysconfig (cat /etc/sysconfig/hwconf | more)`
3. Check the device information in `hwconf`; write down the mount point.
4. Make a directory in `/mnt` (ex: `mkdir /mnt/usbHD`).
5. Execute `mount /dev/sda1 /mnt/usbHD` (if mount point was `.dev/sda`)

Read/Write Capability

You can read, write, copy, and delete files and data just like you would files and data on a hard drive or a regular flash drive. The USB Watch Drive also allows for easy drag and drop for manipulating files.

Unplugging the Device

When using 2000+, you must stop the device using the "safe removal" icon in the system tray.

1. Before you remove the USB Watch Drive, make sure the LED is not flashing. If the LED is flashing, there is still communication occurring between your computer and the USB Watch Drive. Do not remove the USB Watch Drive; it may cause data loss and/or corruption, and possibly the watch drive itself.
2. Double-click the "Safe Removal" icon to bring up the "Unplug or Eject Hardware" window.
3. Select the device you wish to remove (USB Mass Storage Device), then click "Stop."
4. Wait until you see the message indicating it is safe to unplug the device from the USB port. Afterwards you may remove your USB watch from your computer.

If you are using a Mac, you can drag the removable disk icon into the trash bin. This will perform the "Eject" function which will allow you to safely remove the USB Watch Drive.

If you are using Linux, please use the "umount" command to remove the USB Watch Drive.

For additional information and support, please go to www.edgetechcorp.com/support.

IMPORTANT

PLEASE CONTACT A QUALIFIED TECHNICIAN FOR ASSISTANCE IN INSTALLING OR USING THIS PRODUCT IF YOU ARE NOT FAMILIAR WITH DOING SO. ANY INSTRUCTIONS INCLUDED WITH THE PRODUCT ARE FOR CONVENIENCE ONLY AND ARE NOT INTENDED TO BE ALL-INCLUSIVE.

